



RODENT 714-90

www.FreedomBreeder.com 209.664.9600 EXT. 201/202/203 Freedom Breeder · 2306 S. Daubenberger Rd. Turlock, CA 95380 USA




Product Description

This rack is made of 304 Stainless Steel, no rust ever!

The Rodent 714-90 is great rack for organizing rodent sales. This rack is also awesome for larger colony breeding. This rack has the same frame size (Stackable) with Rodent Rack 55, 832-40, 824-70 and 721-80.

Caution

Channels and backstops have sharp edges, take precautions.

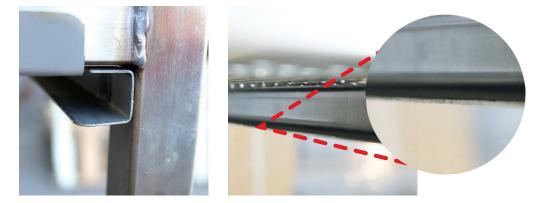

*Any comments or suggestions on this Instructions Manual please send us an email to **manuel@freedombreeder.com**



Packing List

PART #	DESCRIPTION	QTY
1	Rodent 714-90 Stainless Steel Levels	7
2	FB90 Semi Clear Tubs	14
3	Water System	1
4	Stainless Steel Removable Inserts	14
5	Base Frame	1
6	4" Heavy Duty Casters (Nuts and Bolts Included)	4

*Any extra items purchased can be found on your invoice. *Packing list may vary depending on your order.

Requirements









Gloves



*Recommended

1/2" Socket

Ratchet

Cutter



Assembly

STEP 1. Unwrapping

The Rodent 714-90 is packed in a cardboard carton and plastic wrap for protection during shipment. Carefully unpack the items and remove the pallet.

Notice that the Rodent 714-90 is almost assembled.

Note: If you detect any issue or damage at the moment of the delivery please contact us before you accept the shipment.



STEP 2. Parts



Count all parts to make sure nothing is missing.

See Packing list for Descriptions and Quantities.

PART #	DESCRIPTION	ΩΤΥ
1	Rodent 714-90 Stainless Steel Levels	7
2	FB90 Semi Clear Tubs	14
3	Water System	1
4	Stainless Steel Removable Inserts	14
5	Base Frame	1
6	4" Heavy Duty Casters (Screws and Bolts Included)	4

Continue to step 3



Assembly

STEP 3. Casters

Notice that the rack may or may not had the casters installed.


In case they have been installed, you just need to turn upside down the frame with the casters to the correct position.

In case the casters are not installed:


- 1.- Find the casters, nuts, and bolts.
- 2.- Insert the bolts into the holes in the lower frame.

3.- Using the ratchet and the 1/2" socket, tighten the caster with the bolts on each corner of the frame until the bolts are flush to the tubing of the frame.

Note: Make sure to put all the nuts and bolts included (3 per caster) and not overtighten the nuts.

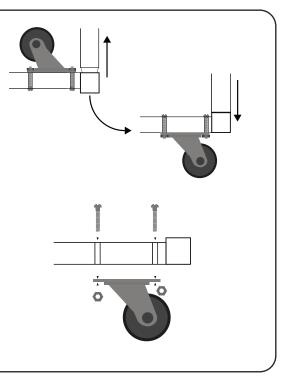

STEP 4. Stacking the levels

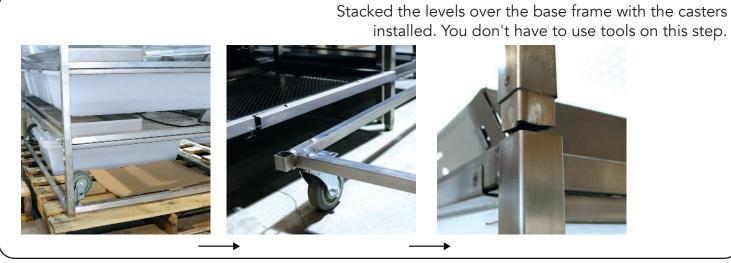

Continue to step 5




Assembly

STEP 5. Trays




STEP 6. Water system



Depending on your choice, you can use a Pressure regulator or a Gravity system.

For the **Gravity system**, put the bucket on top of your rack and let the gravity distribute the water into the water lines.

In the case of using a **Pressure regulator**, connect the water lines into the main pipe previously connected to the pressure regulator.

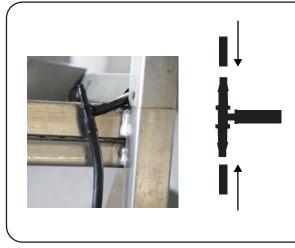


Continue to step 7





STEP 7. Water system cover (If bought)

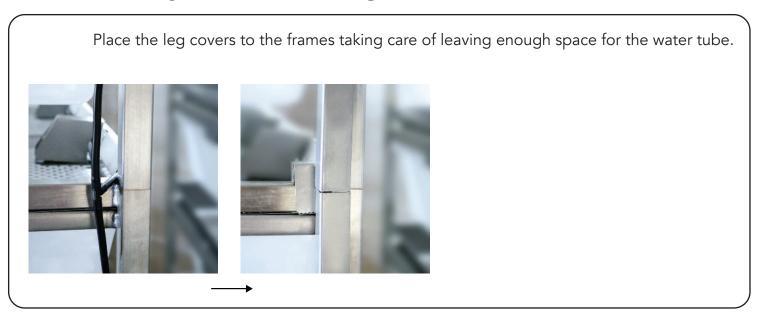


STEP 8. Water system test

- 1. Please run water through your new racking systems for a day before placing rodents or bedding in the rack.
- 2. Check for any disconnected tubing.
- 3. Adjust valves by hand to stop any leak and test again for another day. (Do not tighten with tools!)

This test is to avoid flooding your rodents.



Visit our Website, Facebook page and Instagram

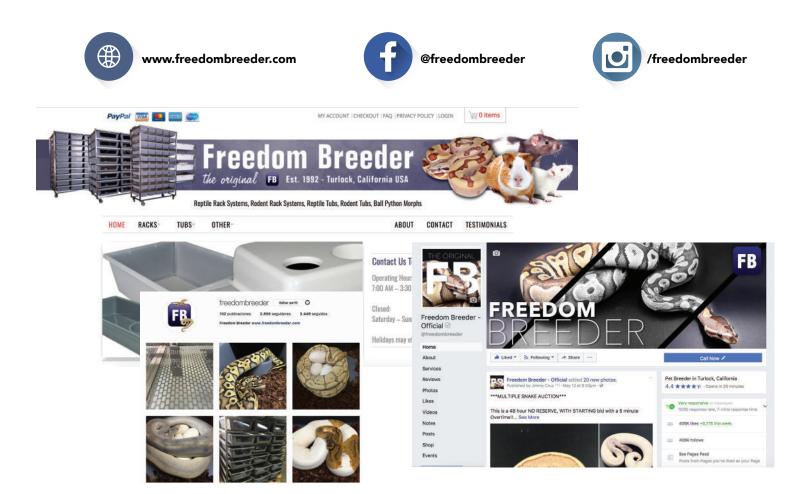

ATTENTION CUSTOMERS:

Please inform the appropriate personnel to always INSPECT YOUR SHIPMENT for damage PRIOR to signing the delivery receipt. If there is obvious damage, do not accept the shipment without NOTING IN DETAIL and taking pictures of the damage on ALL copies of the carrier's delivery receipt. Please have the freight driver SIGN ALL COPIES to acknowledge your damage notation.

-Thank You!

 *Any comments or suggestions on this Instructions Manual please send us an email to manuel@freedombreeder.com
www.FreedomBreeder.com 209.664.9600 EXT. 201/202/203
Freedom Breeder · 2306 S. Daubenberger Rd. Turlock, CA 95380 USA